

# Digital Photoframe Instructions

## Introduction

Your photoframe is a simple-to-use product that brings you digital photos to your living room to share with family and friends. In just minutes, you can go from snapping a photo to viewing it full screen on your Digital Photo Frame. You can preview your Digital Images one at a time, play in a continuous, automatic slideshow, or you can even play .mpeg movies.

Special features:

- Ultra bright screen
- Great viewing angles
- Remote control
- Slide transitions
- Real time clock
- Plays mpeg movies
- Plays mp3 files
- Plays background music
- Auto start feature
- Solid construction & under 2" thin

## Proper Care:

Frames are sensitive and require extreme care. **Use extreme caution when hanging the frame. Make sure it is securely hung before you let go.** They are not meant for traveling. Keep sharp objects and water away from the frame. Hold the entire unit from front to back when moving. To clean, use a non ammonia lcd cleaner sprayed lightly on a towel and wipe gently.

Other things to keep in mind-

- Use indoors **only**
- Keep away from heat sources & direct sunlight
- Surface mount to wall **only** for adequate cooling, not for recessed or enclosed installation.
- Frame has sharp corners and edges. Use care when handling
- Keep away from water sources
- Keep away from small children
- Keep sharp objects away from screen
- **Turn unit off before taking out the memory card (YOU MAY DAMAGE YOUR CARD IF YOU DON'T TURN IT OFF)**
- Take care when inserting memory cards, do not bend the pins
- Make sure it is plugged into a surge protector or unplugged during bad weather
- Do not press in the back of the frame. It will damage the internal electronics.
- Do not carry the frame while the power is on
- Do not delete any of the pre installed software
- Do not upload software from 3<sup>rd</sup> parties without our consent
- Certain images may cause epileptic seizures. Use with caution

## Memory Cards:

After you've take photos with your digital camera, you need to remove the memory card according to your camera's instructions.

- Put your memory card into the frame
- Position the card in the correct direction with the pin holes going into the frame
- Make sure you are sliding into the correct tracks
- **Be sure not to force any cards into a slot, This will damage the pins.**

Note : The slot is designed to accept a memory card only if inserted in the right direction. If the card does not slide in easily, check that you are positioning it properly - **Do Not Force it into the slot.** If you force the card into the slot, you will cause damage to the card, and possibly the frame.